

CXP

BY CRITICAL®



USE QR OR GO TO
WWW.CRITICALTATTOO.COM/CXP-HOWTO
FOR MORE INSTRUCTION



LED INDICATES SYNC STATUS

ATTACH CLIP CORD FOR
WIRED USE

IF LED BLINKS WHEN PEDAL
IS PRESSED, THEN PEDAL IS
NOT SYNC'D WITH A DEVICE.

REFER TO DEVICE MANUAL
FOR SYNCING INSTRUCTIONS

TO CHANGE BATTERIES



WHILE SQUEEZING PEDAL IN ONE HAND,
LOOSEN BOTTOM SCREWS ONE HALF TURN
AND SLIDE SCREWS TOWARDS
THE CENTER OF PEDAL.

FLIP PEDAL OVER AND SET
ON A HARD SURFACE.

CAREFULLY REMOVE TOP DISC
KEEPING SPRINGS INTACT.

REPLACE BATTERIES AND REVERSE
THE ABOVE PROCESS.

REQUIRES 2 AAA BATTERIES

